



## 1. INSERT YOUR COINS INTO A COIN SLOT OR A COIN SLIDE

Coins of 1 Lt, 2 Lt and 5 Lt are available. The money sum is seen on the coin slide display. **It does not give a change!**

## 2. LOAD YOUR CLOTHES

Sort the laundry by color and by a textile care label.

To open the drum door press the „Door“ button („Tur“). Close the drum door.


## 3. SELECT A RIGHT PROGRAMME

Turn the program selector clockwise or anti-clockwise to the required fabric and temperature settings.

For the selected program the indicator light will turn on.

Temperature		
--	--	--
Time	Spin speed	
1:49	60°	1400
1:19	40°	1200
0:59	40°	600
0:39	30°	1200
0:30	40°	1400
1:18	40°	1200
0:57	40°	600
1:00	40°	900
1:10	40°	1200
0:08	-	1400

- Baumwolle — Cottons
- Pflegeleicht — Minimum iron
- Synthetic — Delicates
- Wolle — Woolens
- Express — Express
- Automatic — Automatic
- Oberhemden — Shirts
- Jeans — Denim
- Dunkle farbe — Dark garments
- Schleudern — Spin

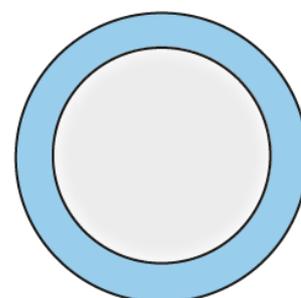

## 4. ADD DETERGENT

Pull out detergent drawer and place detergent in the compartments as follows: detergent for the main wash - , fabric softener or liquid starch - .

**Dispense the correct amount of detergent to achieve required results.**

## 5. START THE PROGRAMME

Press the flashing „Start/Stop“ button.

## 6. REMOVE THE LAUNDRY WHEN THE PROGRAMME HAS FINISHED

After the program has finished, the following appears on the display: „Finish“.

Press the „Door“ button („Tur“) to open the drum door and remove the laundry. Close the drum door.

**We remind You that it is strictly forbidden to damage the machine or to use it not for its intended purpose.**

### „SKALBIU PATS“ REKOMMENDATION:

If You are not sure which program to choose, we recommend „Automatic“ in all the cases as the wash parameters are adjusted to ensure the best possible care and wash result for each item. „Express“ is offered for the quick wash. Your clothes will be done in a half an hour. Press and hold the „Start/Stop“ button after the program has started. Keep the „Start/Stop“ button pressed until the time has elapsed and the following appears in the display „Locked“.

**ATTENTION!** Do not press the Start/Stop button twice or You will lose Your money by breaking the program off.

Turite klausimą?

+370 610 69 888

info@skalbiupats.lt

